

## Rice Transplanter 2Z-430



- Powerful 4-stroke gasoline engine 08300 from B&S company.
- Row space adjustment with 6 shift for quickly adjusting row space from 117~223mm. Just adjusting the gear change hand lever and row space handle. The operation is convenient and quickly.
- The floating plate style hydraulic system for going up and down, and the auto balance system for same planting depth.
- The special feeding system is reliable.
- The multifunction is strengthened for convenient night work and maintenance.

|                                       |                                       |     |     |     |     |     |
|---------------------------------------|---------------------------------------|-----|-----|-----|-----|-----|
| Type                                  | Two-wheel drive 3 floating plates     |     |     |     |     |     |
| Driving wheel                         | With rubber wheel                     |     |     |     |     |     |
| L*W*H (mm)                            | 2460*1480*860(980)                    |     |     |     |     |     |
| Weight (kg)                           | 175                                   |     |     |     |     |     |
| Engine Model                          | B&S Four-stroke 93400 Gasoline Engine |     |     |     |     |     |
| Engine Power (HP/RPM)                 | 3.5HP/3600RPM                         |     |     |     |     |     |
| Speed Change Gear                     | 2 front gears, 1 reverse gear         |     |     |     |     |     |
| Transplantation Capacity              | 2-4 (mu/h)                            |     |     |     |     |     |
| Transplantation Speed                 | 0.31-1.10m/sec.                       |     |     |     |     |     |
| Running Speed                         | <=1.10m/sec.                          |     |     |     |     |     |
| Line Number                           | 4                                     |     |     |     |     |     |
| Line Spacing (mm)                     | 300 ( Fixed )                         |     |     |     |     |     |
| Plant Number in Each Hole             | 35 (standard, adjustable)             |     |     |     |     |     |
| Plant Number (each 3.3 square meters) | 45                                    | 50  | 60  | 70  | 80  | 90  |
| Plant Space (mm)                      | 223                                   | 200 | 180 | 146 | 130 | 117 |